

DRTWOOD-JADE

MODELS: JADE32IN, JADE42IN, JADE42IL

Installation Instructions



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Cuts or Abrasions. Wear protective gloves and safety glasses during installation.

CAUTION: Logs are fragile, handle with care.

NOTICE: To simplify the installation process, positively identify each individual log before beginning installation.

NOTE: LOG #4 NOT USED IN JADE32IN MODELS.



Figure 1. Log Identification



Figure 2. Burner Location

Media Rock: The JADE appliances come standard with media rock. Refer to the appliance installation manual for instructions on how to properly install the media rock in the appliance. The media rock must be installed before the DRTWOOD logs are installed.

Note: Logs may need to be adjusted using slight back and forth movements in order for them to settle into the media securely.

MODELS: JADE42IN, JADE42IL

For JADE32IN, go to page 3.

LOG #1 (SRV2406-702): Place Log #1 into position by setting the bottom of the log onto the media rock, behind the pilot hood. Position Log #1 so that the fork of the log is pointed toward the left side of the firebox. Push the whole log back until it contacts the back wall of the firebox. A gap of 1-1/2 to 2 inches must remain between the left end of the log and the left wall of the inner firebox. See Figure 3.

LOG #2 (SRV2406-701):

Note: The bottom side of Log #2 is defined by two log pin holes. Log pins are not a feature of the JADE design.

Place Log #2 into position by placing the bottom side on the media rock behind the burner and to the right of Log #1. The fork of the log should be pointed to the right side of the firebox. Ensure the log is pushed as far back and as far right as possible. See Figure 4.

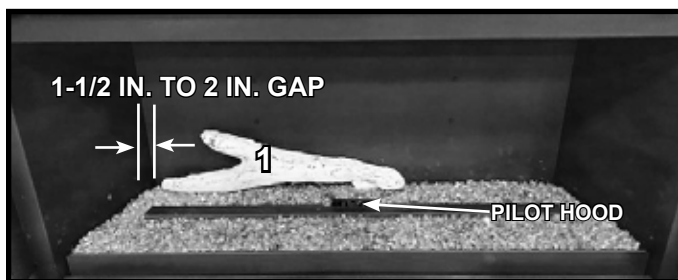


Figure 3. Log #1 Installed

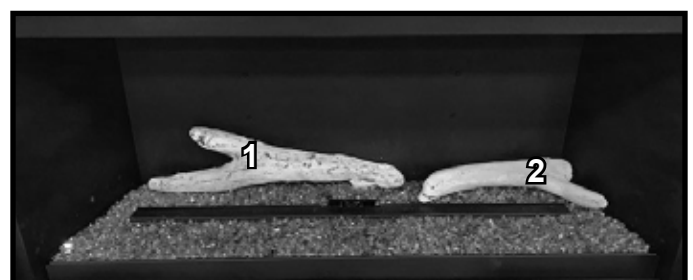


Figure 4. Log #2 Installed

NOTICE! Arrangement of Log #3, Log #4 and Log #5 may vary in the log placement left to right. **DO NOT** allow the logs to touch or cross the burner. Poor flame appearance and/or sooting will occur.

LOG #3 (SRV2406-703):

Note: The bottom side of Log #3 is defined by two log pin holes. Log pins are not included in the JADE design. Place Log #3 into position by placing the bottom down on the media rock, in front of the burner and to the left until it contacts the left side of the firebox. See Figure 5.



Figure 5. Log #3 Installed

LOG #4 (SRV2406-704): Place Log #4 into position on the media rock in front of the burner so that the large end is on the left and the small end is on the right. Center the log left to right. Leave space both in front of and behind the log and ensure the lengthwise crack feature is visible. See Figure 7.

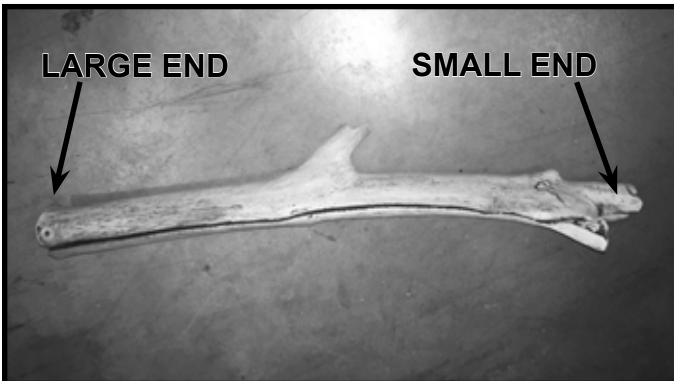


Figure 6. Log #4

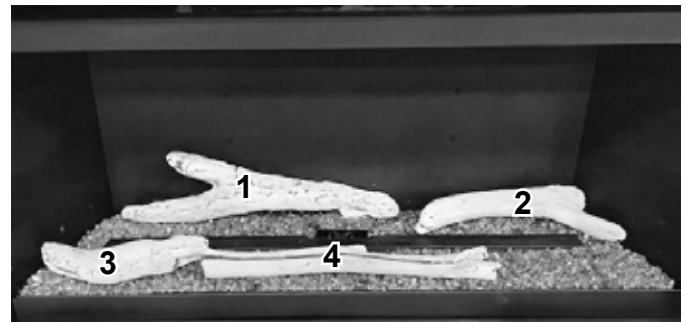


Figure 7. Log #4 Installed

LOG #5 (SRV2406-705): Place Log #5 into position by laying the flat surface of the log on the media rock in front of the burner and to the right of Log #4. Turn Log #5 at an angle until it is positioned as shown in Figure 8.

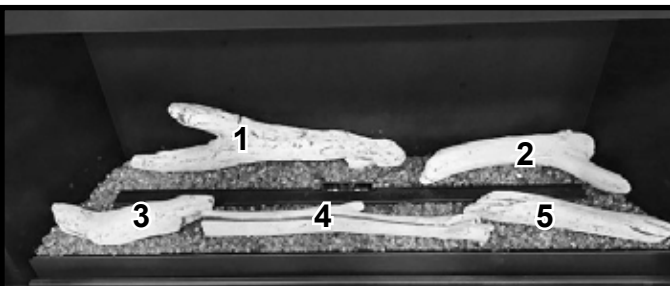


Figure 8. Log #5 Installed

MODEL: JADE32IN

NOTE: Log #4 is not used with JADE32IN. Log part numbers remain the same, but Logs are not placed in numerical order.

LOG #1 (SRV2406-702): Place Log #1 into position by setting the bottom of the log onto the media rock, behind the pilot hood. Position Log #1 so that the fork of the log is pointed toward the left side of the firebox. Center the log from left to right. Push the whole log back until it contacts the back wall of the firebox. See Figure 9.

LOG #3 (SRV2406-703):

Note: The bottom side of Log #3 is defined by two log pin holes. Log pins are not a feature of the JADE design. Place Log #3 into position by placing the side with the log pin holes toward the right side of the firebox. Log #3 should rest on Log #1 as shown in Figure 10. Ensure the log is pushed as far back and as far right as possible. Log #3 should contact both the back and right sides of the firebox. When correctly placed, the front end of Log #3 sits toward the right front corner of the basepan as noted in Figure 10.



Figure 9. Log #1 Installed



Figure 10. Log #3 Installed

LOG #2 (SRV2406-701):

Note: The bottom side of Log #2 is defined by two log pin holes. Log pins are not a feature of the JADE design. Place Log #2 into position by setting the bottom side of the log on the media rock and the forked side pointing to the left side of the firebox. Push the log left until the forked side touches the left wall inside the firebox. Push the right end of the log back until it contacts the return tab noted in Figure 11.

LOG #5 (SRV2406-705):

Note: The bottom side of Log #5 is defined by two features: a log pin hole and a log pin slot. Log pins are not a feature of the JADE design.

Place Log #5 into position by placing the bottom side of the log on the media rock with the log pin hole near the center of the firebox and the log pin slot on the side near Log #3 as shown in Figure 12.



Figure 11. Log #2 Installed



Figure 12. Logs and Media Installed

Please contact your Majestic dealer with any questions or concerns.

For the location of your nearest Majestic dealer, please visit www.majesticproducts.com.

Majestic, a brand of Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.majesticproducts.com